


■ 接線方式

端子代碼	說明
+24V	接電源供應器 +24V (最大 330mA)
0V	接電源供應器 0V
A	RS485 +
B	RS485 -
G	RS485 GND (參考點, 可不接)
1A, 1C~16A, 16C	輸出點 1 到輸出點 16 (5A/30VDC, 5A/250VAC)

■ 指撥開關

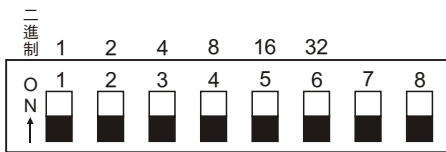

SW	說明
1	Address bit 0
2	Address bit 1
3	Address bit 2
4	Address bit 3
5	Address bit 4
6	Address bit 5
7	OFF= None parity check , 1 stop bit No= None parity check , 2 stop bit
8	OFF= Baud rate 9600 No= Baud rate 19200


Modbus Protocol Register Address

Address	Code	Word	Function	Range
0000H	03H/06H	1	R/W DO 1~DO 16 State	0000H ~ FFFFH


DO1 : LSB Ex : 讀取第一站資料

DO16 : MSB Send : 01 03 00 00 00 01 CRC
 Received : 01 03 02 XX XX CRC
 Ex : 讀取第一站資料
 Send : 01 06 00 00 XX XX CRC
 Received : 01 06 00 XX XX CRC

■ 接線圖

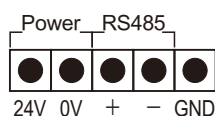

DO 1~8 輸出

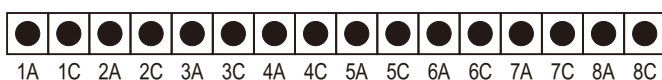

DO 9~16 輸出

