


指撥開關

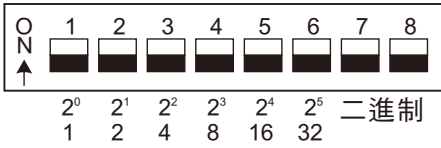

SW	說明
1	Address bit 0
2	Address bit 1
3	Address bit 2
4	Address bit 3
5	Address bit 4
6	Address bit 5
7	OFF = None parity check , 1 stop bit ON = None parity check , 2 stop bit
8	OFF = Baud rate 9600 ON = Baud rate 19200

Modbus Protocol Register Address


Address	Code	Word	Function	Range
0000H	03H	1	Channel 1 Data Number	0000H ~ 0FFFH
0001H	03H	1	Channel 2 Data Number	0000H ~ 0FFFH
0002H	03H	1	Channel 3 Data Number	0000H ~ 0FFFH
0003H	03H	1	Channel 4 Data Number	0000H ~ 0FFFH
0004H	03H	1	Channel 5 Data Number	0000H ~ 0FFFH
0005H	03H	1	Channel 6 Data Number	0000H ~ 0FFFH
0006H	03H	1	Channel 7 Data Number	0000H ~ 0FFFH
0007H	03H	1	Channel 8 Data Number	0000H ~ 0FFFH

1~6 channel : PT100Ω Input (PTI)


7~8 channel : Analog Input (AI)

接線圖

CN1 :

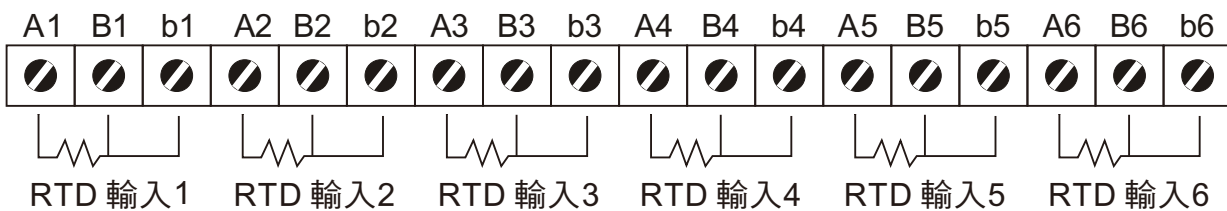

CN2 :

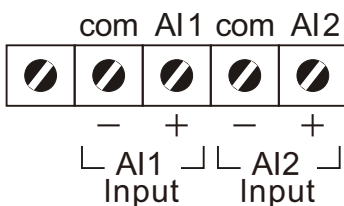

CN3 :

