

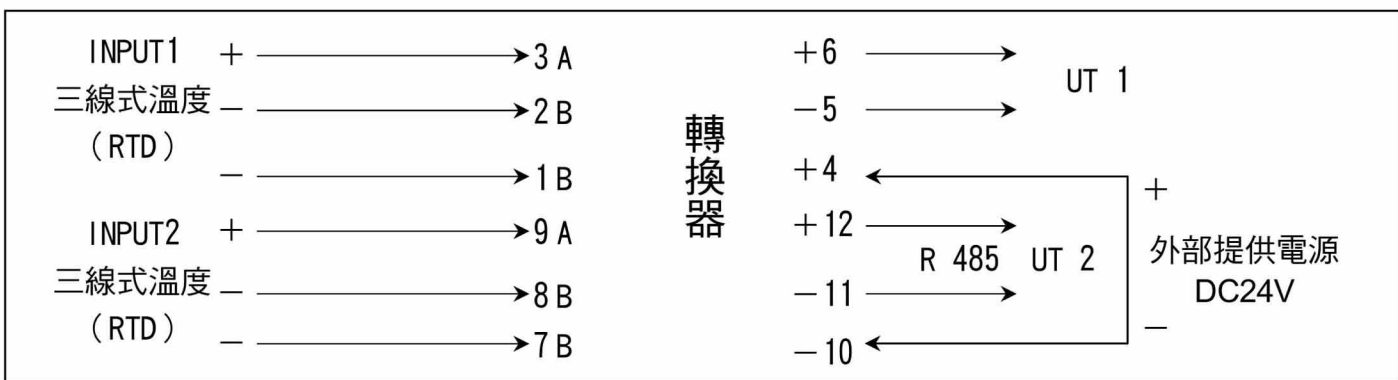
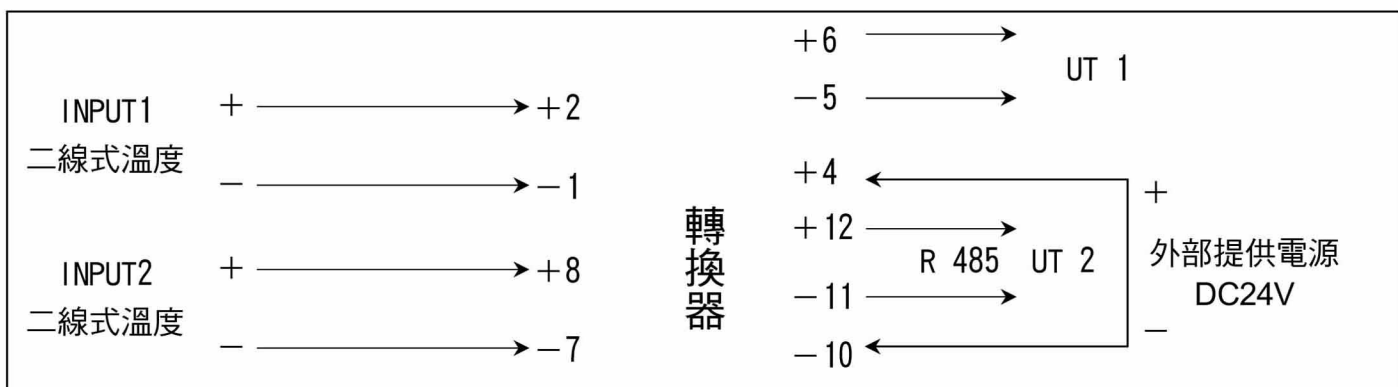
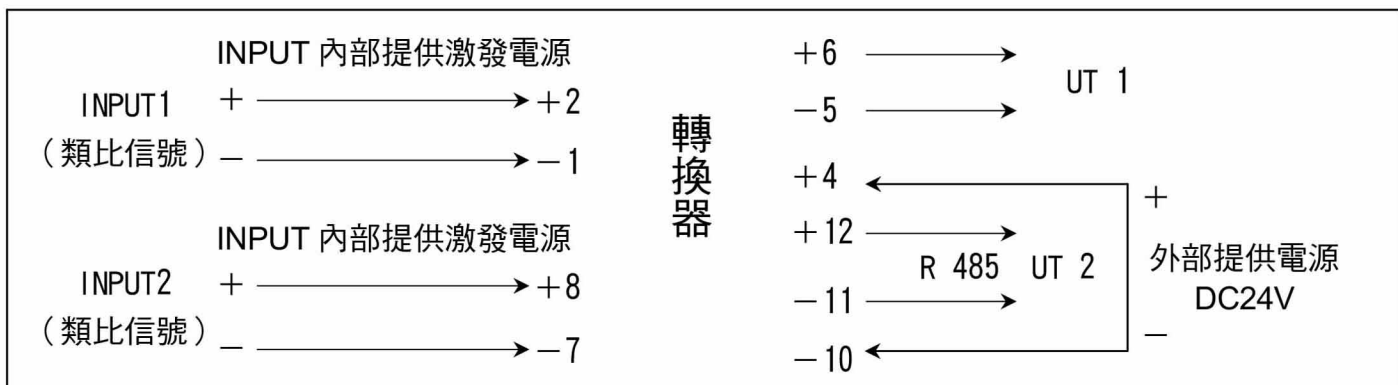


TCS210DC接線圖

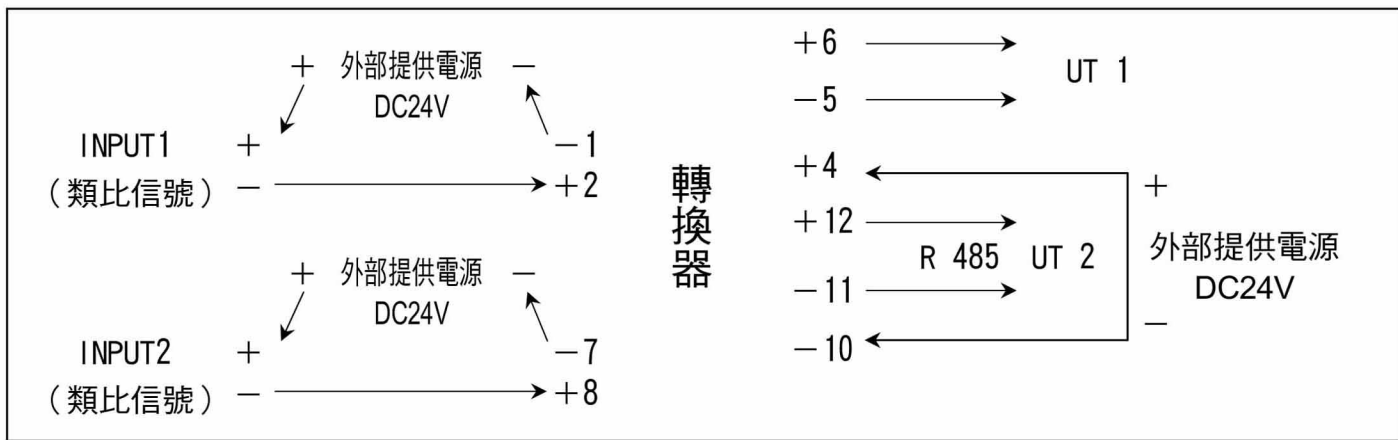





指撥開關說明

SW1	1	2	3
TC . PT . mV	OFF	OFF	ON
0~24mA	ON	OFF	ON
-10~10V	OFF	ON	OFF

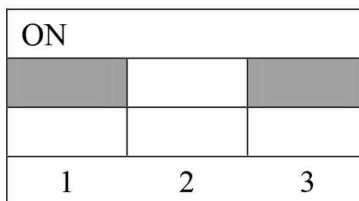


例：I/P:0~24mA
將 1、3 腳往 ON 開

TCS210DD接線圖

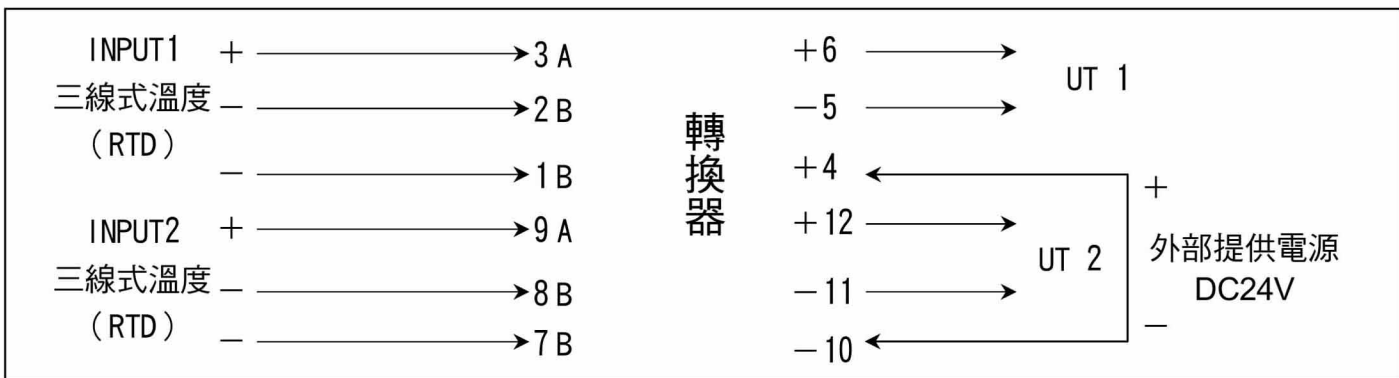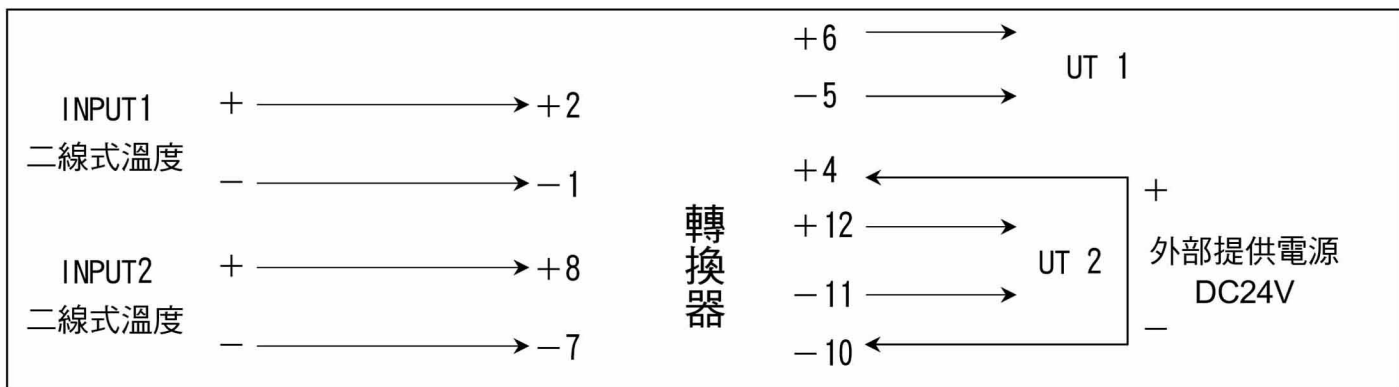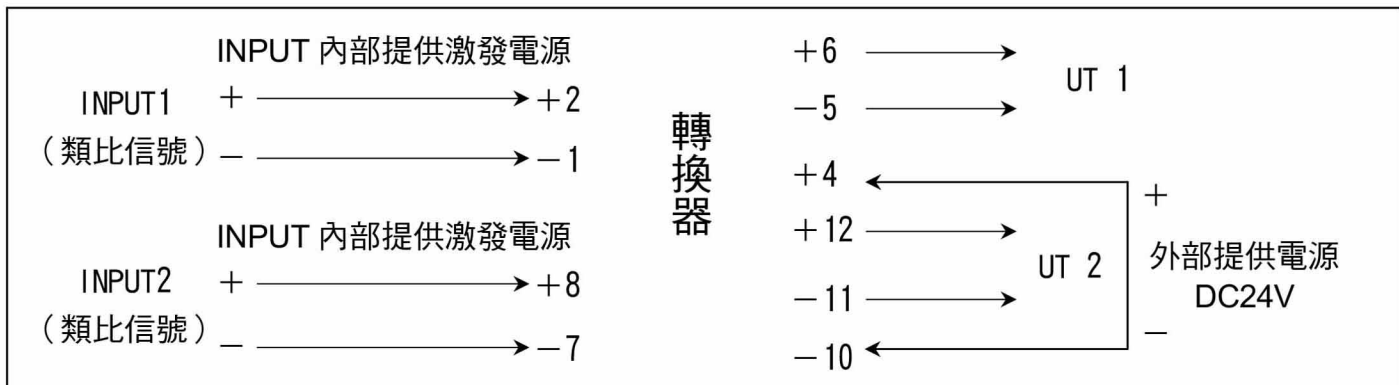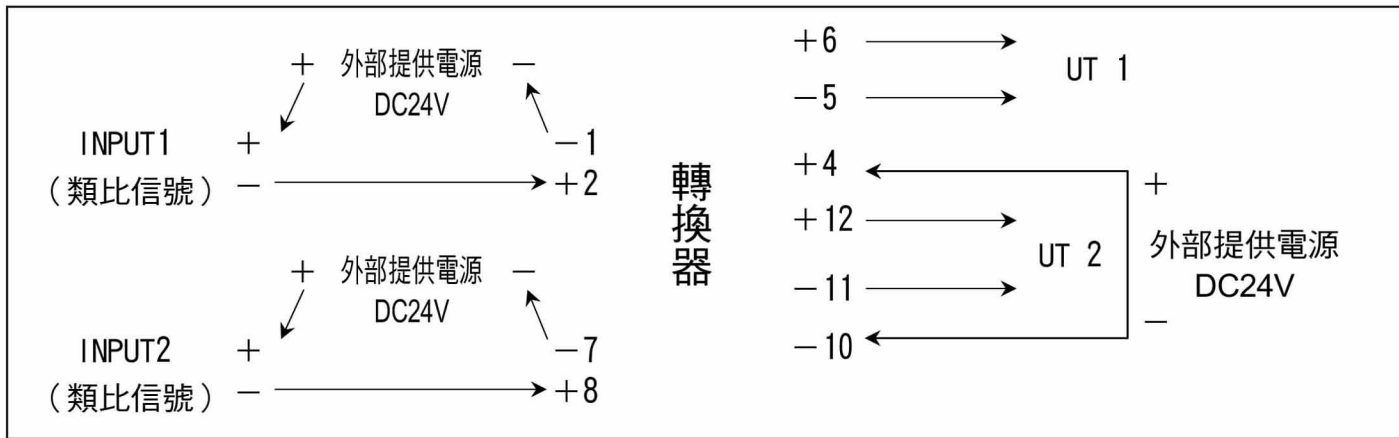

指撥開關說明

SW1	1	2	3
TC . PT . mV	OFF	OFF	ON
0~24mA	ON	OFF	ON
-10~10V	OFF	ON	OFF

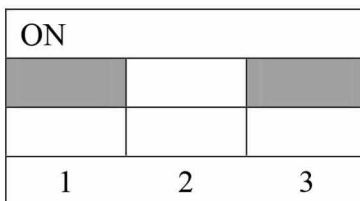

例：I/P:0~24mA
將 1、3 腳往 ON 開